

PSE: EOS protective screens

This instruction sheet is provided with the PSE protective screens kit for barriers EOS; the kit is designed to protect the front window of safety barriers in areas with particularly difficult environmental situations: operations of painting, welding or with residues of processing that may hit the barrier.

The PSE kit consists of:

- (A) Stainless steel clamps for the end barrier caps;
- (B) Stainless steel holding spring;
- (C) Front polycarbonate protective panel (screen);
(the quantity of the panels is double in order to provide also a spare part);

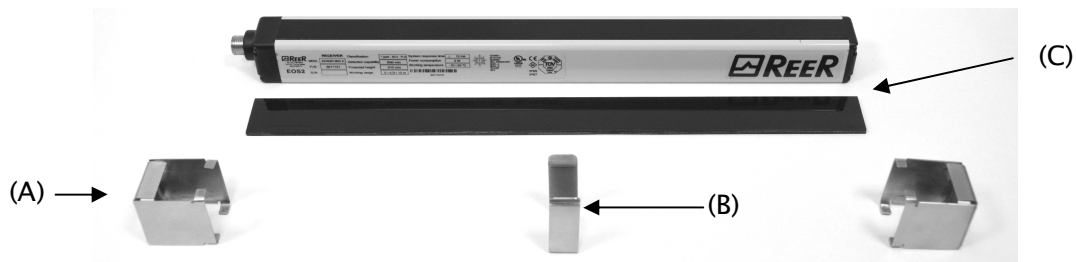



Figure 1

Proceed to the assembly as follows:

Take the front protective panel and place it on top of the front window.




Apply the two protective metal clamps for top and bottom caps, thus locking the protective panel.

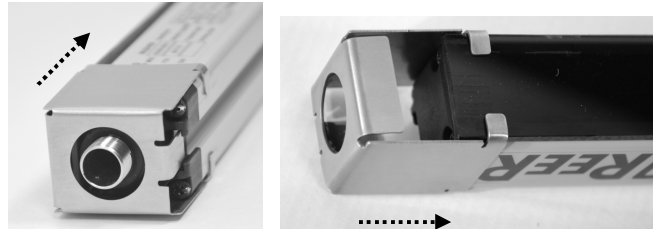

Insert in the center of the profile the holding spring.

(for models 750 and upper holding springs are 2 for the TX and 2 for the RX and must be inserted at a distance equal to 1/3 and 2/3 of the total length of the profile).

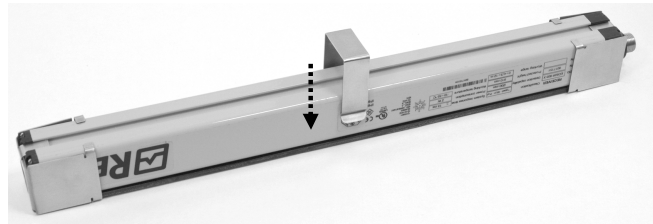

After assembly the barrier appears as in the figure.

